



To Log in:

- 1. Choose a Machine from the list.
- 2. Choose your name.
- 3. Press Login.

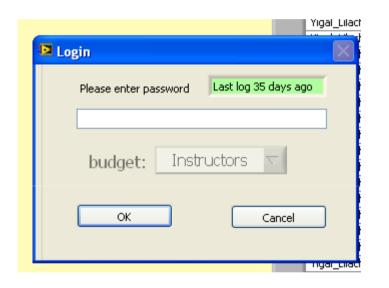

4. Enter your password and press OK

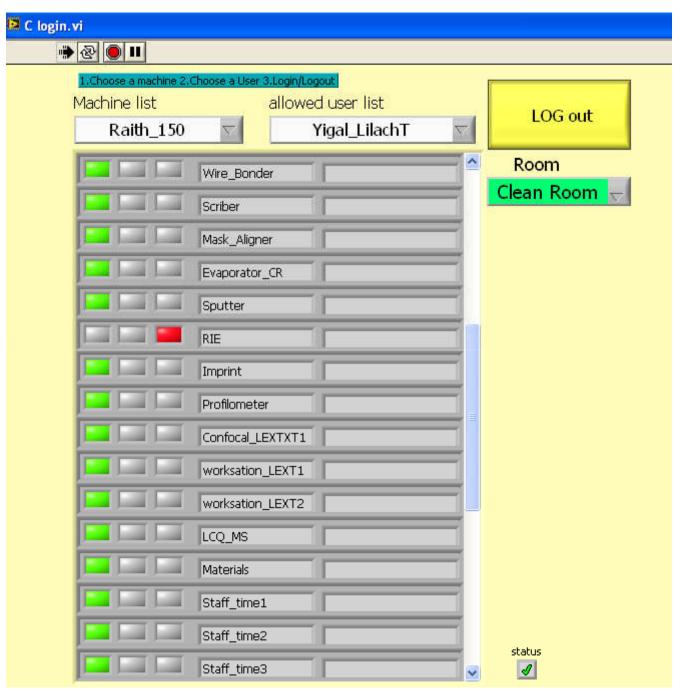


To Log out:

- 1. Choose the machine
- 2. Press Log out



3. Press YES if choice is correct

If needed: correct the exit time or add a remark. Check the e-mail box to email the remark to Assaf.

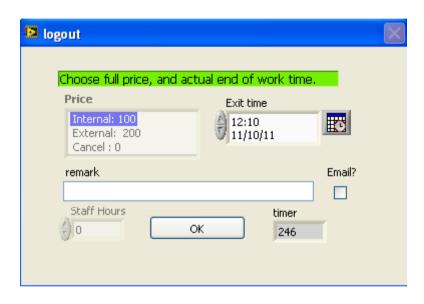

Press OK

Different machines may have different logout screens